


# *terrain*

IRON MESH CHANDELIER, TIERED  
SAFETY, INSTALLATION & CARE INSTRUCTIONS

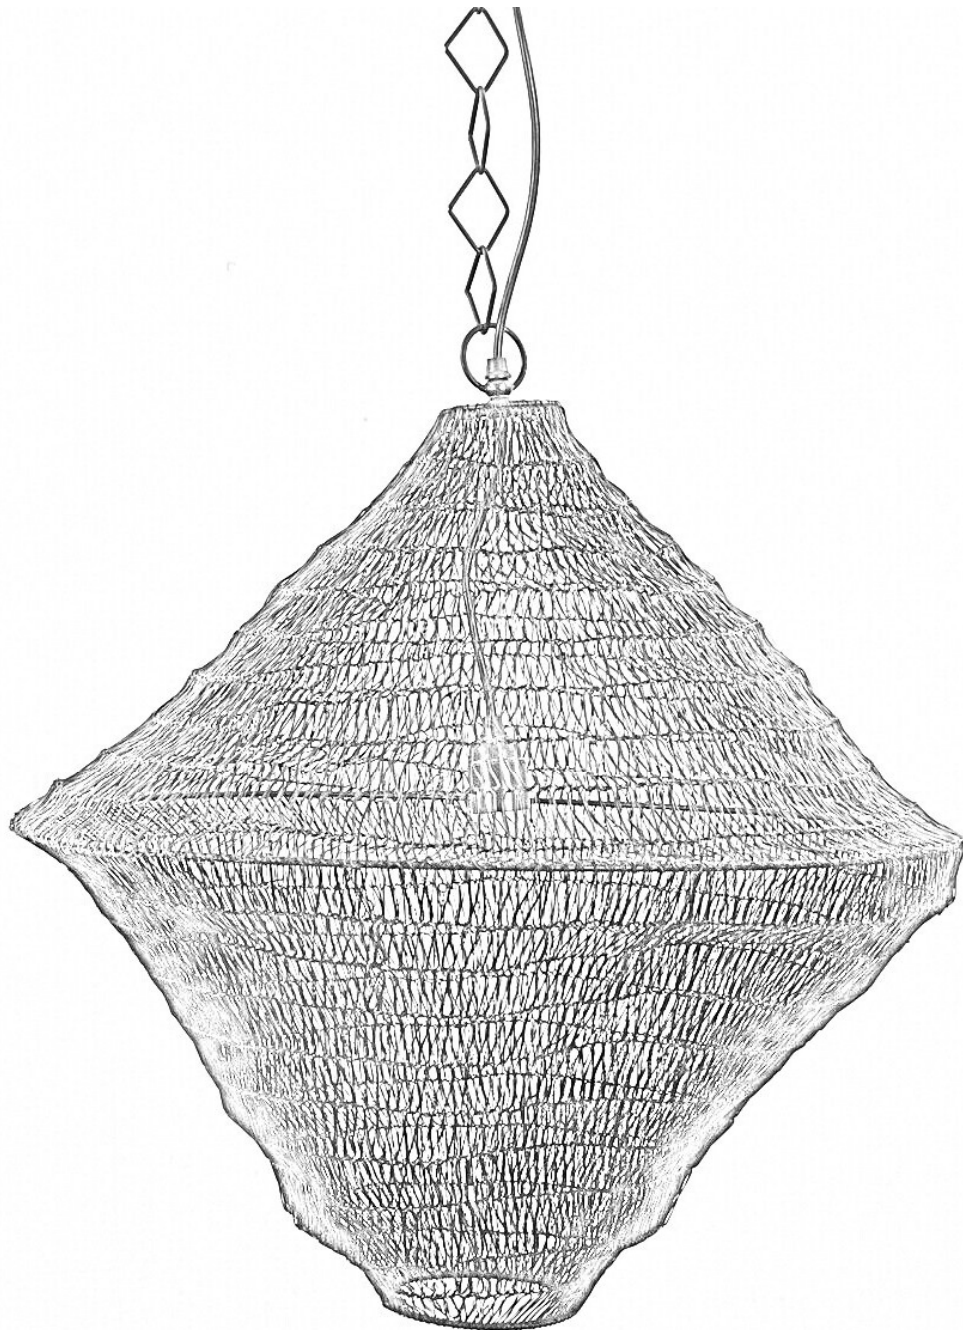

# *terrain*

## IRON MESH CHANDELIER, TIERED SAFETY, INSTALLATION & CARE INSTRUCTIONS

### **Important Safety Instructions:**

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. This fixture is shipped with all internal wiring intact.
- Installation requires an electrical junction box in the ceiling sufficient to support weight of the light fixture
- Do not install a ceiling that has radiant heating.
- Lighting fixture is for indoor, dry location use only.
- This fixture has been rated for up to (1) 60-watt maximum TYPE A standard incandescent light bulb. To avoid the risk of fire, do not exceed the recommended wattage.

### **WARNING:**

- To reduce the risk of fire, electrical shock or personal injury, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF. AT THE MAIN FUSE / CIRCUIT BREAKER UTILITY BOX.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

### **Assembly:**

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Determine the desired ceiling mounting location of the lighting fixture.

### **CARE AND CLEANING**

To clean, wipe the light fixture ONLY with a soft, dry cloth.

# *terrain*

## IRON MESH CHANDELIER, TIERED SAFETY, INSTALLATION & CARE INSTRUCTIONS

### Installation Procedure

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
3. Determine the desired lighting fixture suspension length from the ceiling.
4. Adjust the fixture power cord from the canopy (N).
5. If needed, cut off any extra length of wire cord cable (G). To prepare the cut power cord for the installation process, use wire strippers to prepare the ends of the two wires so that there is about ½" of exposed wire for the Plastic Wire Connectors (A).
6. Gently pull existing Ground (T), Hot (U) , and Neutral (V) Junction Box Wires down from the Ceiling Junction Box (S) and allow them to hang.
7. Carefully inspect the chandelier's fixture wires. The Neutral Fixture Wire (R) is White. The Hot Fixture Wire (Q) is Black, and the Ground Wire (P) is Green.
8. If your ceiling outlet junction Box(S) does not have a Ground junction Box wire(T), insert the Ground screw(D) head into the Mounting bracket(O) where it's marked "Ground" and wrap the fixture's green ground wire around the ground screw(D). Tighten the screw to clamp the Ground junction Box wire(T) between the ground screw(D) head and the mounting bracket(O). It is imperative that the ceiling junction box(S) in your home be properly grounded.
9. Connect the Neutral Wire (R) to the Neutral Junction Box Wire (V); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
10. Connect the Hot Wire (Q) to Hot Junction Box Wire (U) ; it usually has black insulation around it. Fasten them together with a plastic Wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
11. Gently tuck the wire connections neatly into the Ceiling Outlet Junction Box (S).
12. Attach the Mounting Bracket (O) to the Ceiling Outlet Junction Box (S) using the Mounting Screws . Tighten screws with a screwdriver until secure.
13. Slide the Canopy up with Cord and fix the Nipple (M) into the Centre Hole of Bracket (W).
14. Secure the canopy (N) to the ceiling by screwing the decorative screws (B) into the canopy and bracket.
15. Insert One (1) 60W- maximum Type A incandescent lightbulb (not included). Do not exceed the specified wattage.
16. Restore power to Ceiling Outlet Junction Box (S) and test the fixture.

