

TEAK COLD FRAME PLANTER

Assembly Instructions

terrain

TOOLS REQUIRED BUT NOT INCLUDED:


#2 Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

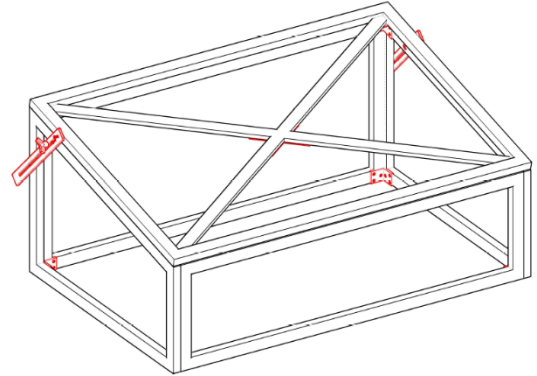


PARTS INCLUDED:




(A) Screw JF
(6 x 38mm) x8




(B) Screw JF
(4 x 12mm) x24

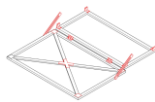


(C) Top and back
frame
x1

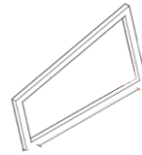

(D) Right - Side
frame
x1

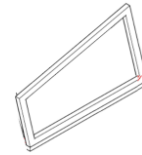


(E) Left - Side
frame
x1

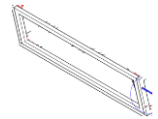

(F) Front frame
x1

STEP 1

With help, place the top and back frame (C) down on its top onto a smooth clean surface. Remove wing nuts from side frames (D&E). Align the right-side frame (D) and the left-side frame (E) to top frame (C). Then, insert wing nuts and fully tighten the wing nuts, do not overtighten.

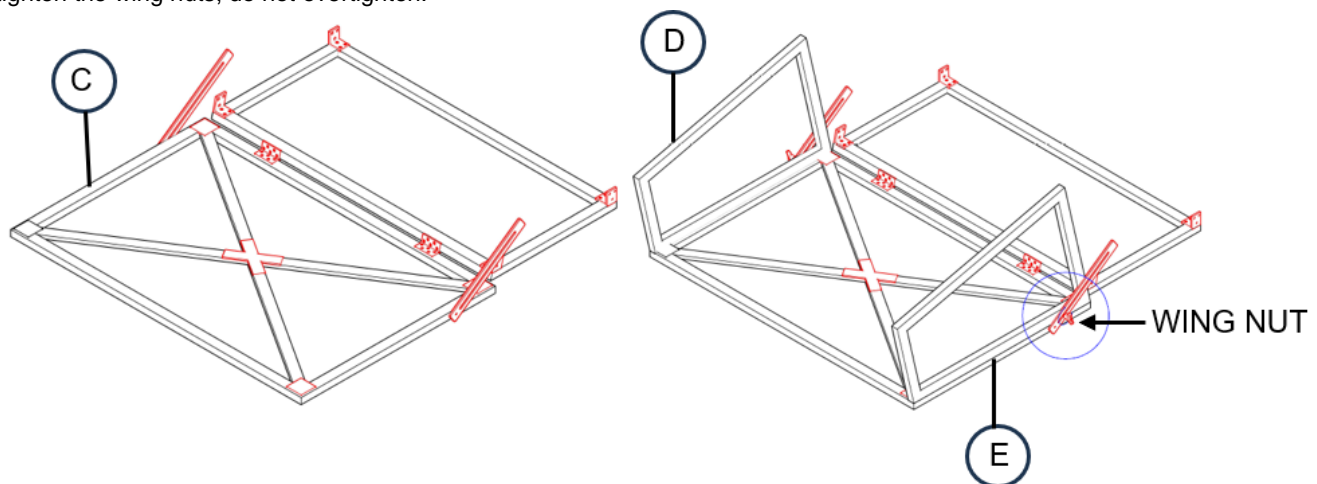

Assembly Instructions

STEP 2

A 3D perspective diagram of a rectangular frame with a triangular truss structure on top. The frame is composed of several rectangular sections. The truss structure is formed by a network of beams, including a large diagonal beam crossing the top of the frame. Red arrows and labels indicate specific joints and connections: 'a' is at the front-left corner joint; 'b' is at the front-right corner joint; 'c' is at the top-left corner joint; 'd' is at the top-right corner joint; 'e' is at the bottom-left corner joint; 'f' is at the bottom-right corner joint; 'g' is at the top-left joint of the truss; 'h' is at the top-right joint of the truss; 'i' is at the bottom-left joint of the truss; 'j' is at the bottom-right joint of the truss; 'k' is at the top-left joint of the truss; 'l' is at the top-right joint of the truss; 'm' is at the bottom-left joint of the truss; 'n' is at the bottom-right joint of the truss; 'o' is at the top-left joint of the truss; 'p' is at the top-right joint of the truss; 'q' is at the bottom-left joint of the truss; 'r' is at the bottom-right joint of the truss; 's' is at the top-left joint of the truss; 't' is at the top-right joint of the truss; 'u' is at the bottom-left joint of the truss; 'v' is at the bottom-right joint of the truss; 'w' is at the top-left joint of the truss; 'x' is at the top-right joint of the truss; 'y' is at the bottom-left joint of the truss; 'z' is at the bottom-right joint of the truss.