

terrain

 
Beaded Flush Mount Ceiling Light (WHITE)

0097672257

SAFETY, INSTALLATION & CARE INSTRUCTIONS



Fixture Without Additional Pole

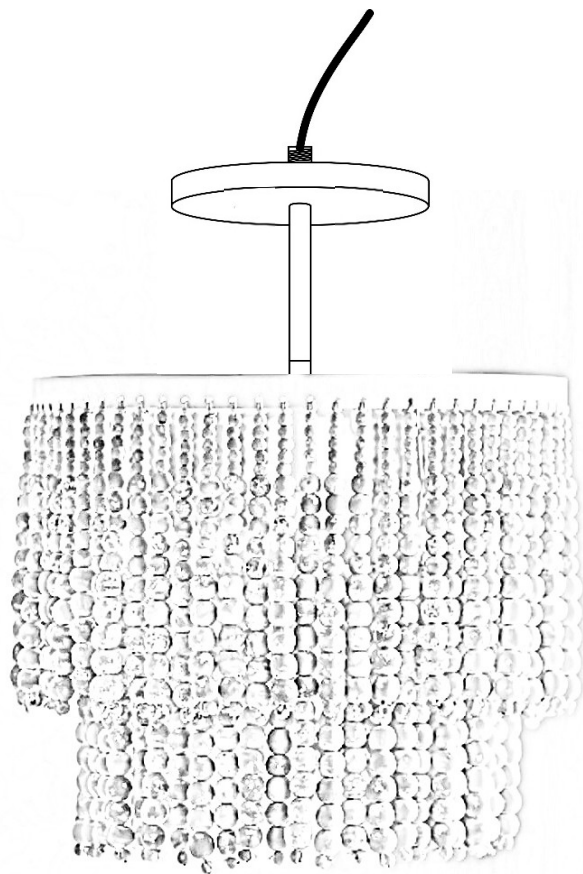

Fixture With Additional Pole

terrain

Beaded Flush Mount Ceiling Light (WHITE)

0097672257

SAFETY, INSTALLATION & CARE INSTRUCTIONS

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. This fixture is shipped with all internal wiring intact.
- Installation requires an electrical junction box in the ceiling sufficient to support weight of the light fixture
- Do not install a ceiling that has radiant heating.
- Lighting fixture is for indoor, dry location use only.
- This fixture has been rated for up to (1) 60-watt maximum TYPE A standard incandescent light bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNING:

- To reduce the risk of fire, electrical shock or personal injury, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF. AT THE MAIN FUSE / CIRCUIT BREAKER UTILITY BOX.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Determine the desired ceiling mounting location of the lighting fixture.

terrain

Beaded Flush Mount Ceiling Light (WHITE)

0097672257

SAFETY, INSTALLATION & CARE INSTRUCTIONS

INSTALLATION PROCEDURE:

- Shut off the main electrical supply from the main fuse box / circuit breaker.
- Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
- Determine the desired lighting fixture suspension length from the ceiling
- Lighting fixture comes equipped with the one fixed pole – 1 inch (G) and with an additional pole of 4 inch (H) to hang the fixture on desired height if required.
- Unscrew the mounting plate (F) from canopy (I) and secure the plate to the ceiling or junction box using mounting screws (C) .
- Connect the fixture to a suitable ground in accordance with local electrical codes. Before connecting the wires, make sure the power is shut off. Connect the wires to the terminals and place them neatly.
- Gently pull existing Ground, Hot, and Neutral Junction Box Wires down from the Ceiling Junction Box (M) and allow them to hang.
- Carefully inspect the chandelier's fixture wires. The Neutral Fixture Wire (L) is White. The Hot Fixture Wire (K) is Black, and the Ground Wire (J) is Green.
- Connect the Neutral Fixture Wire (L) to the Neutral Junction Box Wire ; it usually has white insulation around it. Fasten them together with a plastic wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
- Connect the Hot Fixture Wire (K) to Hot Junction Box Wire; it usually has black insulation around it. Fasten them together with a plastic wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
- Attach the Ground Wire (J) from the fixture to the Ground Junction Box Wire ; it usually has green insulation around it or is bare wire. Fasten them together and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
- Gently tuck the wire connections neatly into the Ceiling Outlet Junction Box (M).
- Make sure that the wires do not come into contact with any hot parts of the lamp.

terrain

Beaded Flush Mount Ceiling Light (WHITE)

0097672257

SAFETY, INSTALLATION & CARE INSTRUCTIONS

- Attach the Mounting Bracket (F) to the Ceiling Outlet Junction Box (M) using the Mounting Screws (C). Tighten screws with a screwdriver until secure.
- Place the canopy onto the ceiling and secure it in place by screwing the plate screw (D) tightly onto the canopy.
- Install the light bulb (not included) into sockets
- Refer to the label on the lamp socket for Max Wattage information.
- Installation is complete. Turn the circuit breaker back on and test the light fixture.



ADDITIONAL POLE (4 INCH)

This lighting fixture includes an additional 4-inch extension rod (H) to allow for increased hanging height, if desired.

To install the extension rod:

- Carefully thread the 4-inch extension rod (H) between the fixture body and the existing down rod or ceiling canopy.
- Ensure all threaded connections are securely tightened by hand to maintain stability and alignment.
- Make sure to put the small parts back in the same order and orientation as they were originally. This ensures the fixture is secure, balanced, and looks neat once installed. Proceed with the remainder of the assembly and installation as outlined in the instructions.

Note: The use of the extension rod is optional and may be omitted based on your preferred fixture height or ceiling clearance.

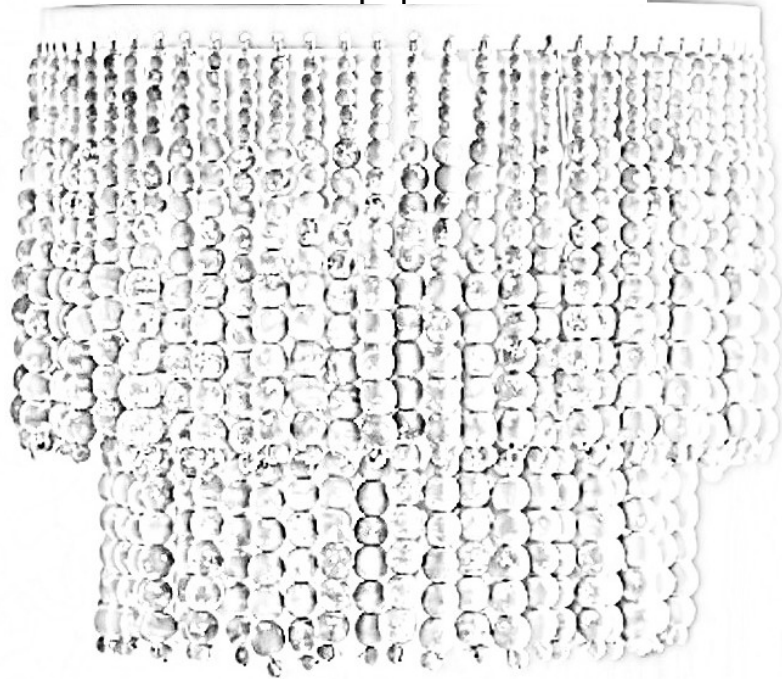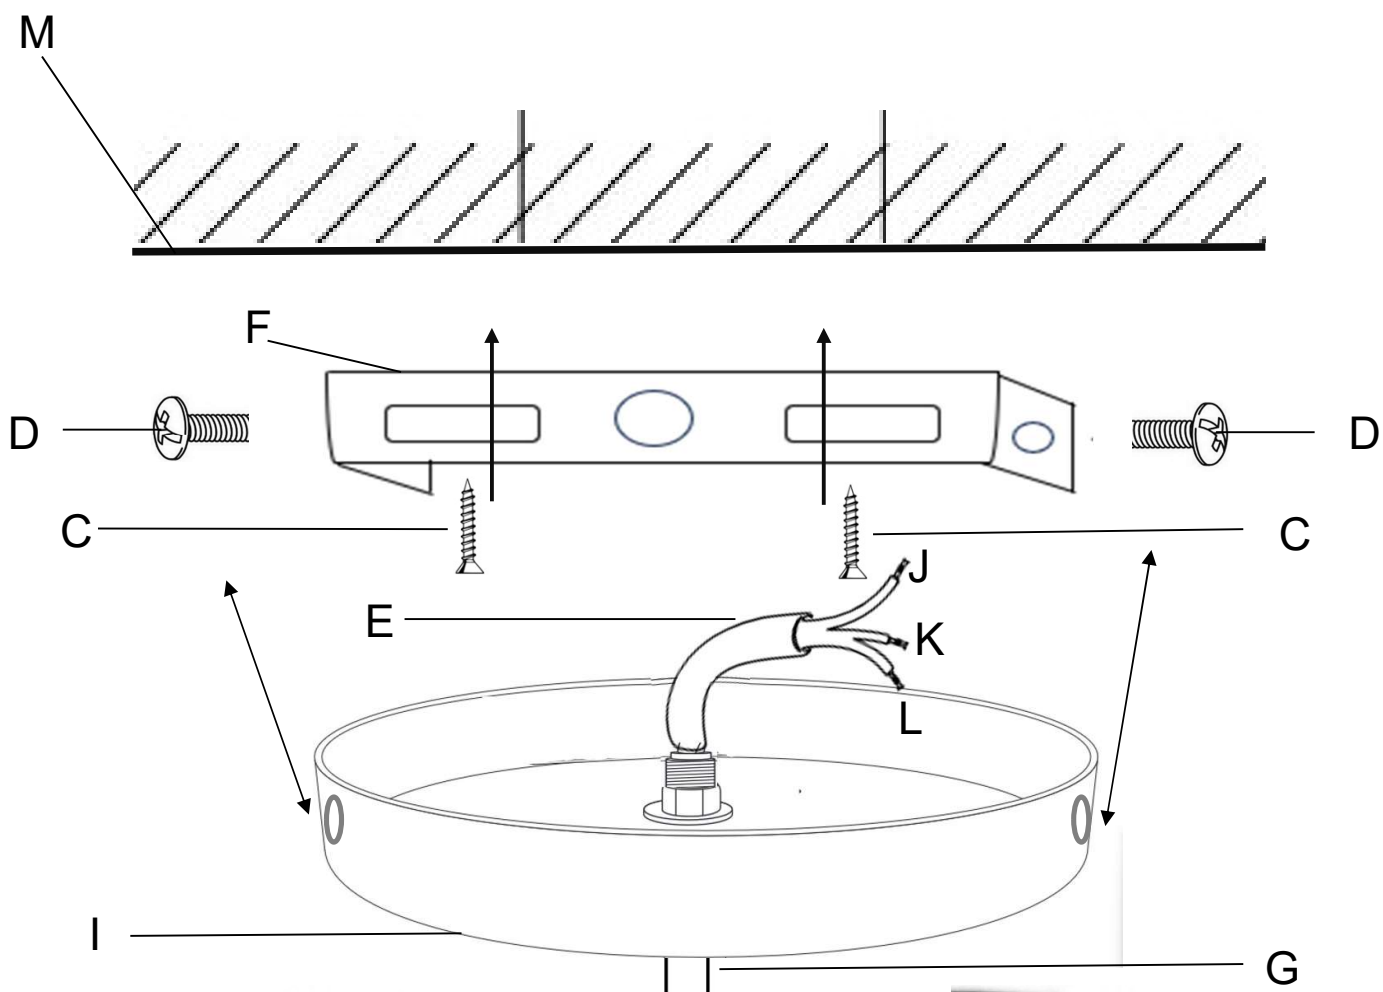


 
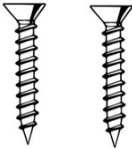 

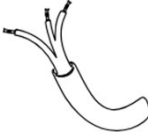 







terrain

Beaded Flush Mount Ceiling Light (WHITE)

0097672257

  SAFETY, INSTALLATION & CARE INSTRUCTIONS

Parts & Hardware

A- <u>Wire Connector</u> x 2 	B- <u>Wall Anchor</u> x 2 	C- <u>Mounting Screw</u> x 2 
D- <u>Canopy Screw</u> x 2 	E- <u>Cord</u> 	F- <u>Bracket Ceiling Mounting Bar / Plate</u> 
G- <u>1 Inch Pole with threaded Nipple</u>  fixed with product	H- <u>4 Inch Pole (Additional)</u> 	I- <u>Canopy</u> 
J- <u>Ground Wire (Green)</u> 	K- <u>Hot Fixture Wire (Black)</u> 	L- <u>Neutral Fixture Wire (White)</u> 

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.