
*

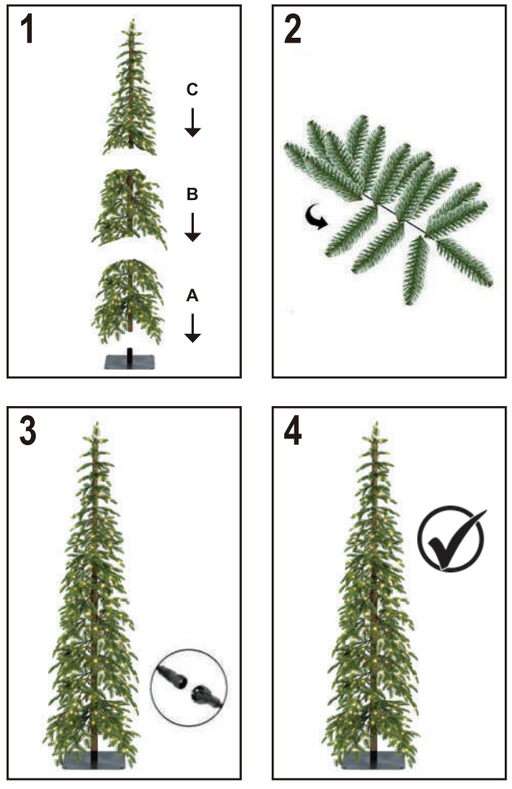

Instruction manual	WA72
Product description	Pre-lit (IP20) Alpine fir LED – non-replaceable bulbs Indoor use only
Date	2021.01

GB

Read this warning & instruction manual completely before assembling this product. Keep this manual and all relevant information for future reference!

WARNING!

Safety instructions

- Keep original packaging for storing your product.
- Keep young children supervised when using product.
- Keep plastic bags out of reach of young children.
- The product must be assembled by an adult.
- This product is for indoor use only.
- This product is for decorative purposes only. Do not use this product for any other purpose than for which it is intended. Do not modify the product.
- Illustrations are for reference only, as the models may vary slightly.
- Caution – during assembly hinged or moving parts may pose a risk of pinching.
- Place the product on a solid, level surface to ensure stability.
- Do not overload the tree or make it unstable with heavy decorations.
- Do not use near a flammable product, heat, open fire/ flame or submerge in water.
- Do not decorate with burning candles.
- Do not use the lighting set when damaged.
- Unplug product when leaving it unattended or when not in use for extended periods of time.
- Do not connect to electricity supply whilst product is in packaging.
- Do not interconnect light-set with other sets.
- Avoid any damage to the isolation of the wiring, cable and LEDholders of the lighting set.
- Do not secure the lighting set with staples or nails.
- Do not completely cover the lighting set with decorations or other flammable materials, to prevent a fire hazard or damage.
- The LED bulbs on this product are non-replaceable.

Assembly instructions

The packaging should contain a top section and a bottom section, depending on purchased model (larger trees include middle sections). Tree base with a pre-wired lighting set is included. Before assembly, remove all parts from packaging.

Tree:*

1. Slide the stem (part A) onto the tree foot.
2. Slide the top of the tree onto the stem (part B). Do not move the branches unnecessarily whilst assembling.
3. Shape the branches of the tree to give the desired effect / fullness. For the best result, shape the ends of the branches straight and spread them out. Start with the branches closes to the stem of the tree. Be sure to check our website for tips on how to give the tree shape: www.everlands-trees.com
4. Ensure the tree is fully assembled and connected before plugging into the mains. Plug the transformer into the power outlet.
5. Your tree is ready to be decorated.

Lighting set instructions and operation:

- The transformer and lighting set are suitable for indoor use only.
- Check the lighting set before use for damaged wiring. When in doubt, do not use the lighting set.
- Ensure that power source delivers the correct supply voltage as marked on the plug-in transformer.
- The power cord of the lighting set cannot be replaced; if the cord is damaged, the lighting set should be disposed of.
- Do not interconnect light-set with other sets.
- Avoid any damage to the insulation of the wiring.
- The functions of this lighting set are controlled by the supplied control box.
- The LED-bulbs cannot be replaced; should a lamp become defective, then the others will continue to function.
- Press timer button: the item will light up. After 8 hours of being lit, the lamps will switch off automatically. The lights will turn on again automatically the following day at the time they were originally switched on.

Storage instructions

- Before storage, remove all decorations.
- Clean with dry cloth only.
- Disconnect the connecting lighting pieces.
- Carefully remove tree sections, starting from the top.
- Press the tips back up against the branches. Please handle the tree sections with care to avoid damages to the light set wiring.
- Put the tree sections back into the carton box.
- Store the box flat, in a cool dry place.

Disposal instructions

This product contains electrical and electronical components. To protect the environment, at the end of product life it should be taken to an appropriate local authority / council recycling site for WEEE (waste electrical and electronical equipment). It should not be disposed of in the normal household waste. Outer carton – cardboard (widely recycled)