ANTHROPOLOGIE

Ingram Double Bath Vanity

Assembly Instructions

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

Care Instructions:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

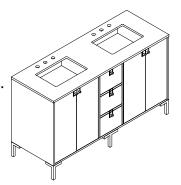








B. Center Legs 2x



C. Hex Key 5mm

1x



D Bolts 5/16" x 1 1/2" 12x




5/16" 12x



E. Lock Washer F. Flat Washer 5/16" 12x

1. With help flip the carton over onto a clean surface. Open the carton and remove the bottom wood crate frame as shown. Once crate is removed then with help flip the carton upright and slide the carton upward.

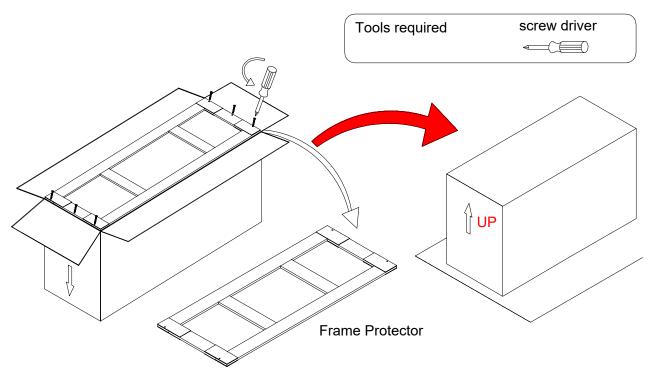

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.


© 2019 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

ANTHROPOLOGIE


Ingram Double Bath Vanity

Assembly Instructions

2. Using a screwdriver remove all of the protectors as shown.

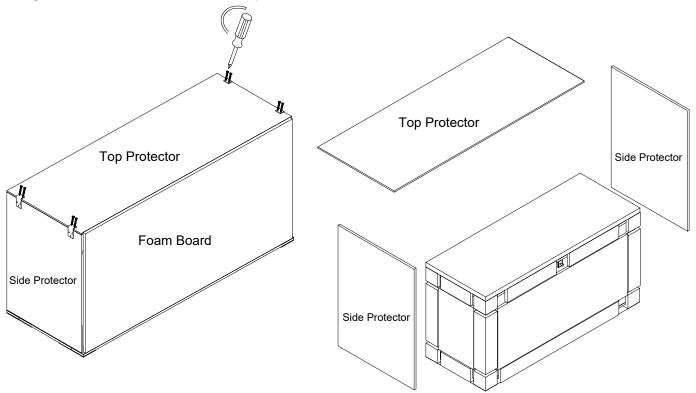

3. With help carefully lay the vanity over onto its back onto a clean smooth surface such as carpet or cardboard.

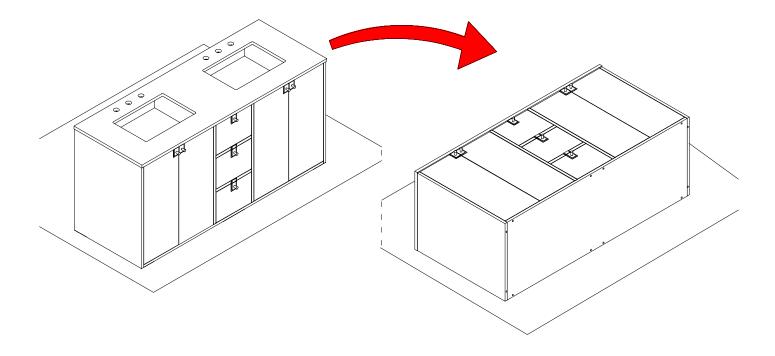

ANTHROPOLOGIE

Ingram Double Bath Vanity

Assembly Instructions

4. Align legs (A) as shown. Insert bolt (D), Lock washer (E), and Flat washer (F). tighten with supplied hex key (C). With help stand the vanity upright making sure that you don't lean it on the lags as this can damage them.

