
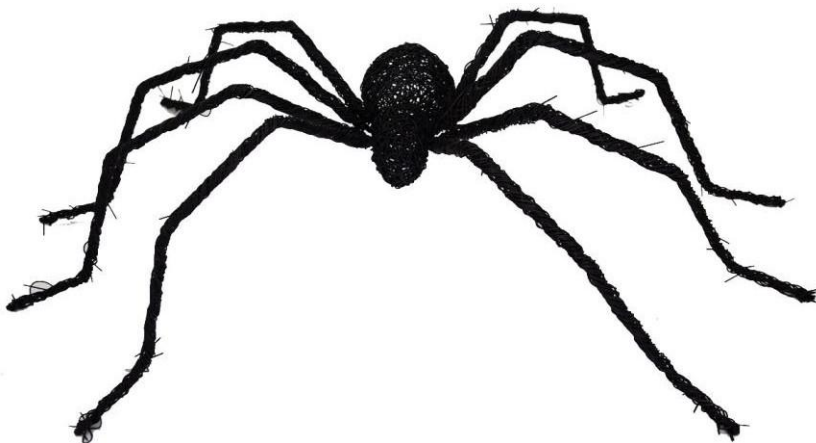
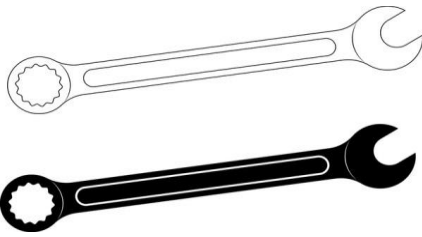
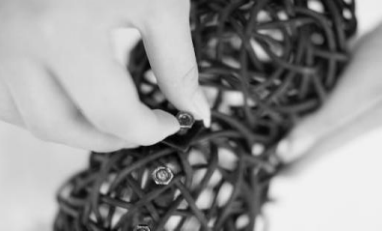


ASSEMBLING INSTRUCTION 0110245974
OBJ VINE SPIDER LRG

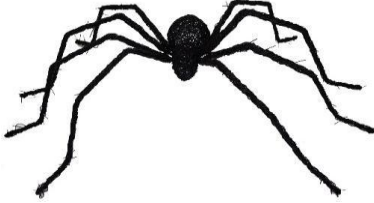

	1X
	8X
	8X

	USE ADDITIONAL TOOLS SIZE 8 TO STRENGTHEN
--	--

1 	2 	3 
INSERT THE BODY BOLT INTO THE FOOT HOLE	MAKE SURE THE INSIDE OF THE BOLT HOLE IS FREE FROM DIRT OR PAINT. INSERT THE BOLT SMOOTHLY, THEN TIGHTEN SECURELY.	